



Sometimes, during transport the Operator Presence Control (OPC) Cable or the Drive Cable can become detached from their levers.

We apologise for any inconvenience but it is a simple, tool free solution to reattach them.


1. Determine which cable has come loose from which handle.

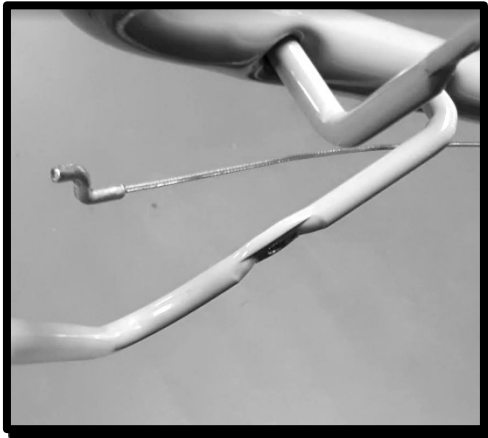


2. Gently pull the handle free from its locating hole on the main handlebar.

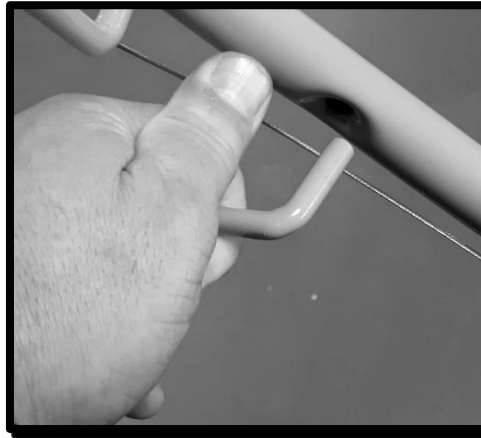


3. Insert the end of the cable in to the location hole on the lever

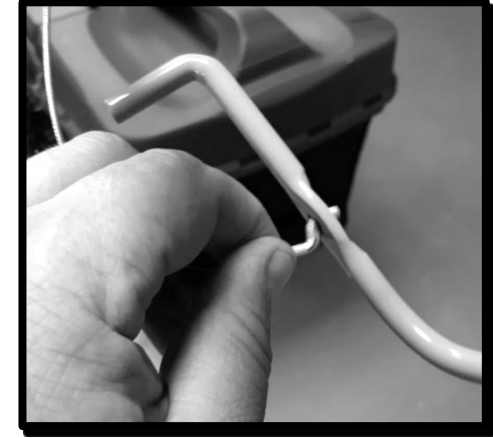

4. Follow the curve of the cable until the cable lies flat in the handle.

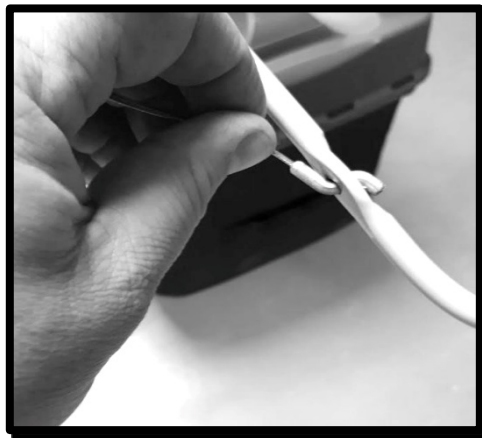

5. Refit the lever back into its location hole on the main handlebar.

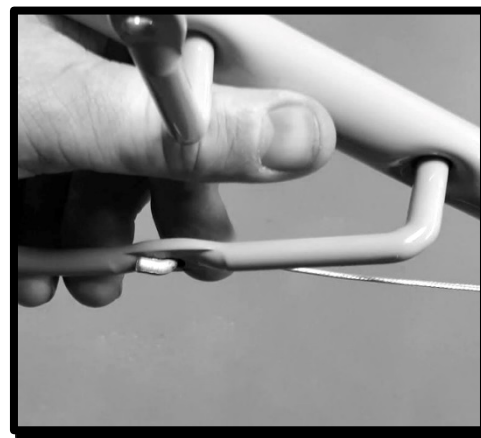

6. Check the cable lies flat and has not snagged on any other part of the mower.

